




 **KORYAK**

PRO KORYAK
DROPPER SEATPOST
INSTALLATION


PRSI0040

PRO KORYAK LINE-UP

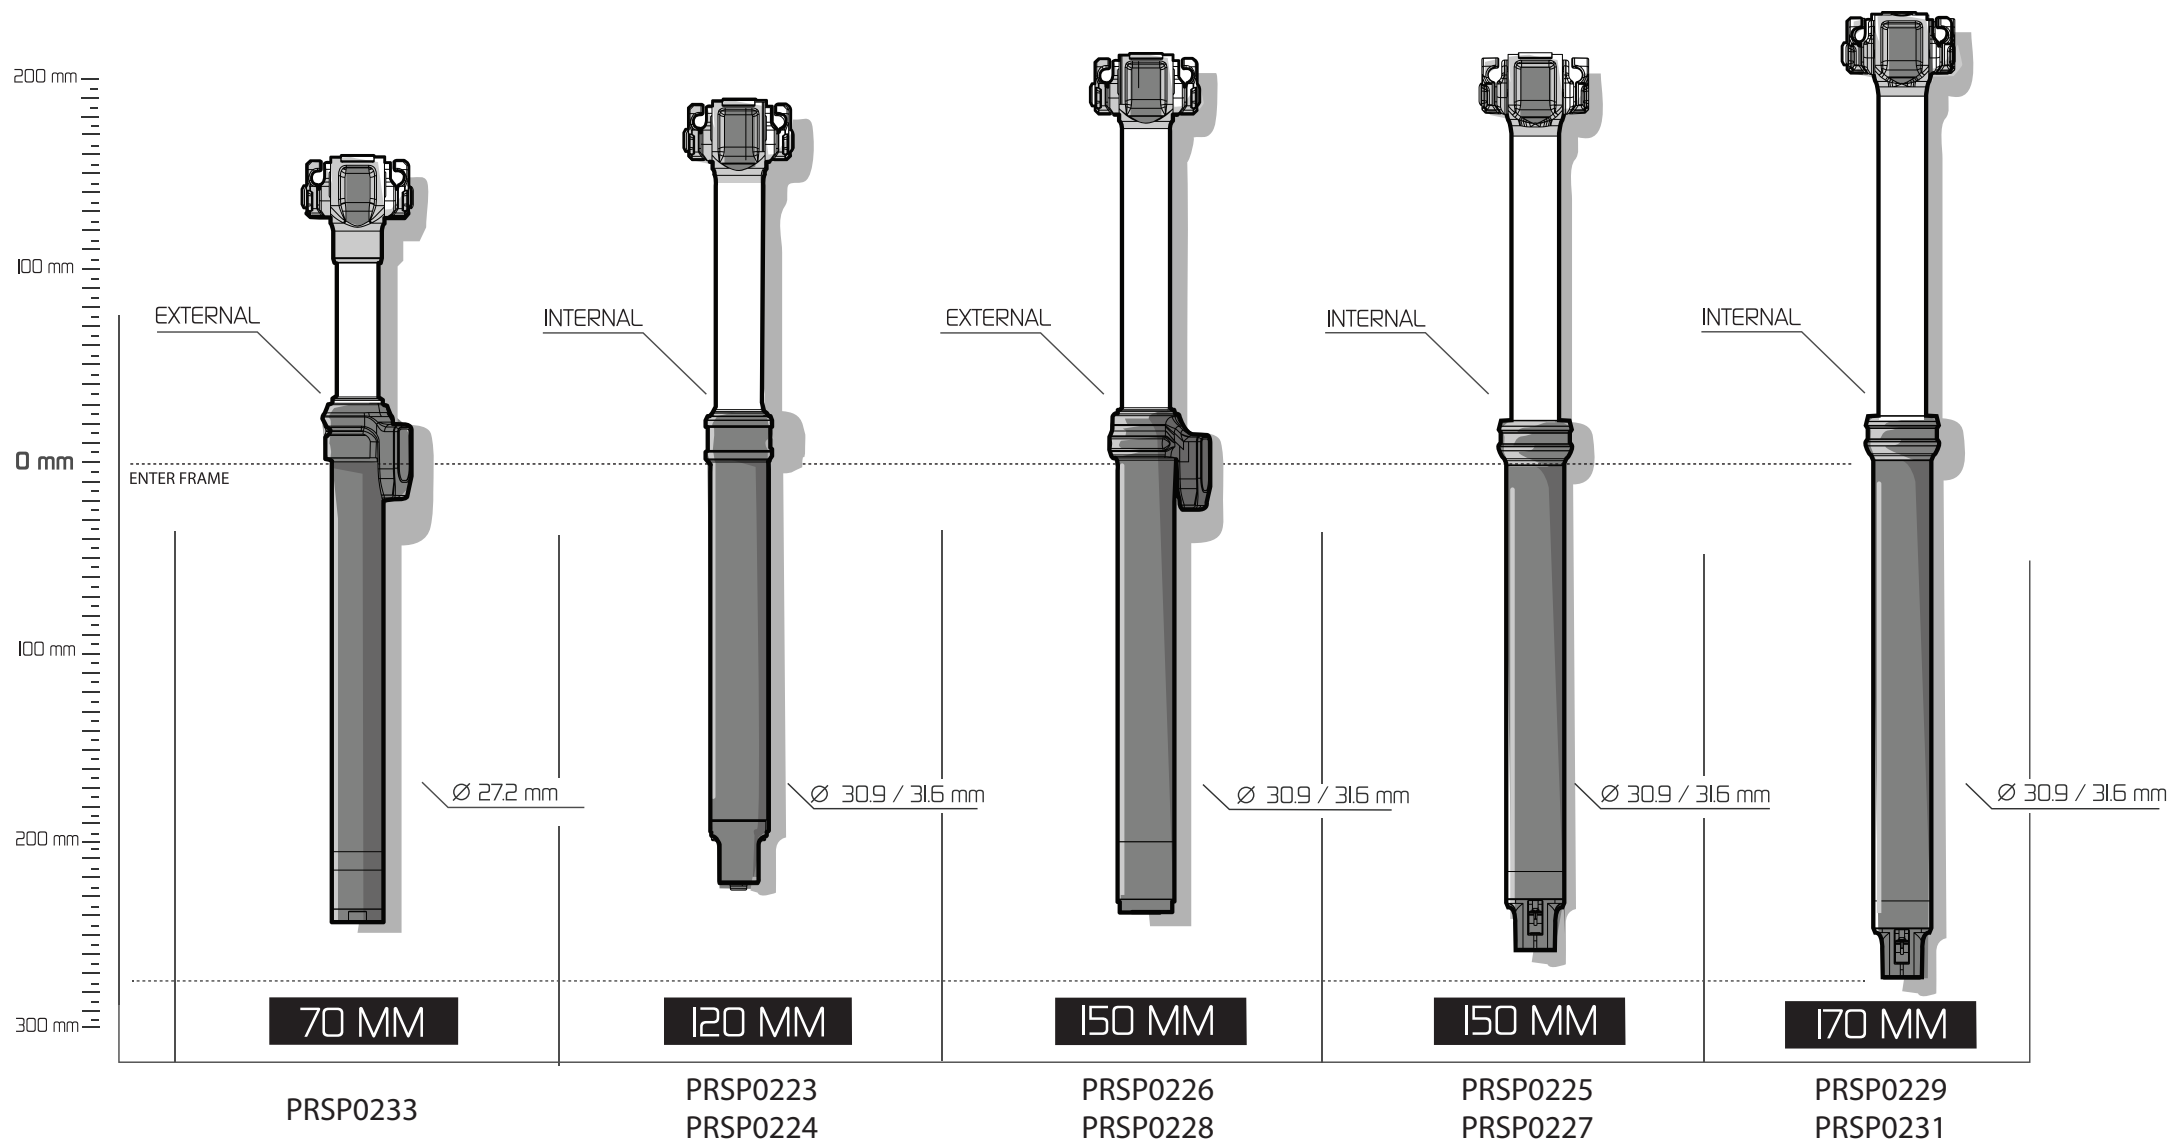


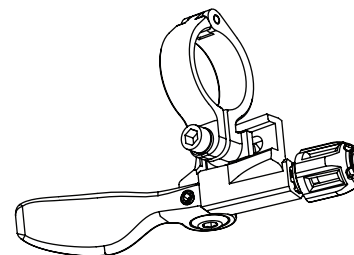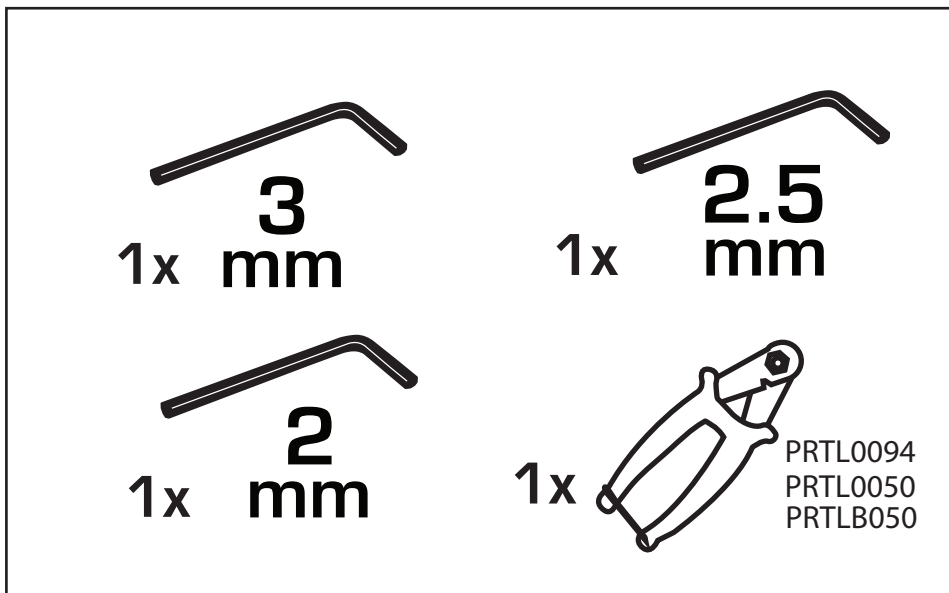


A. PRAC0211

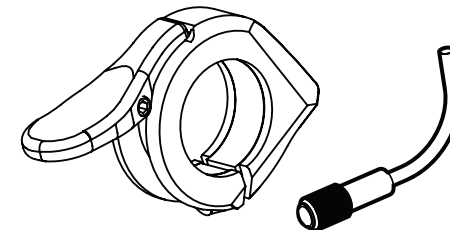


B. PRAC0212

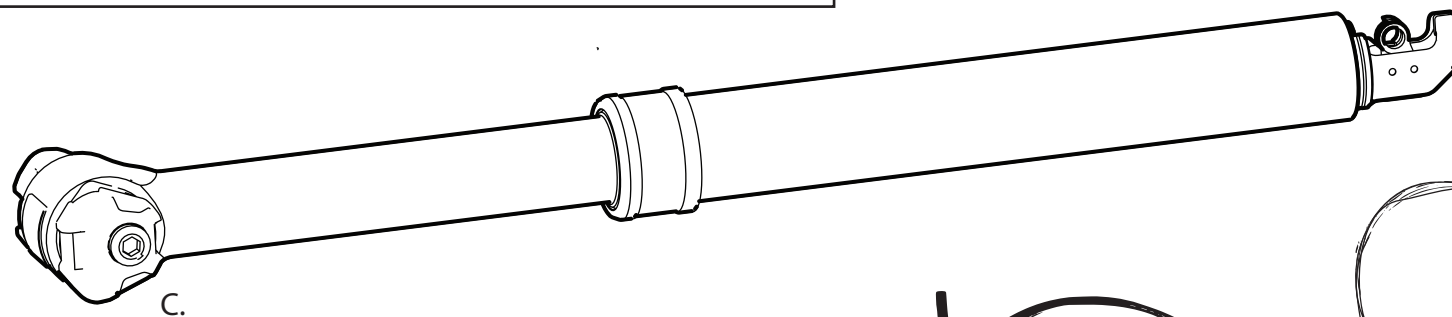


C.

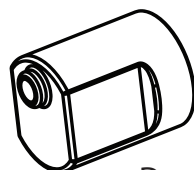

D.

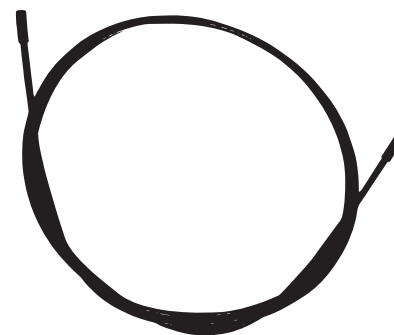







E.




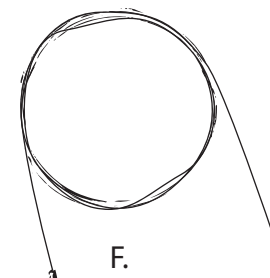







F.








G.

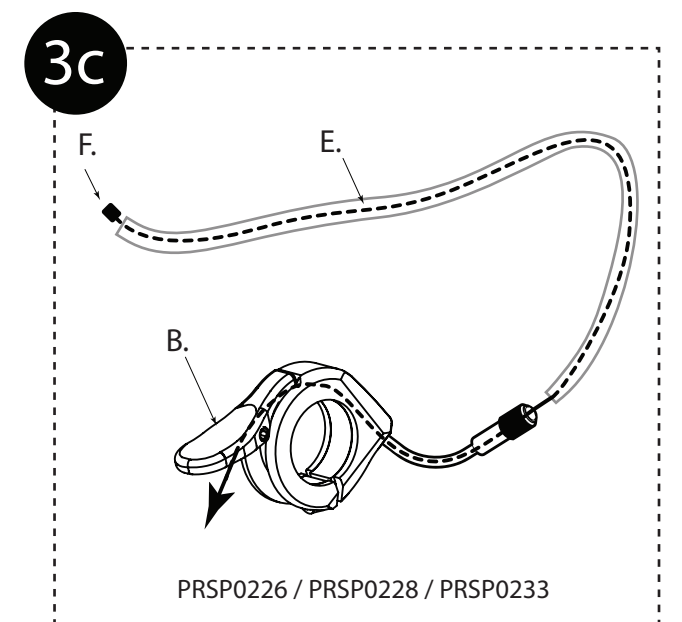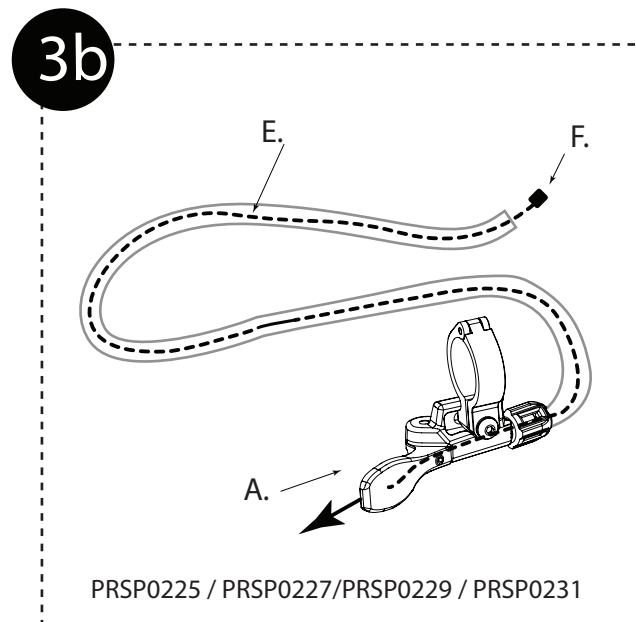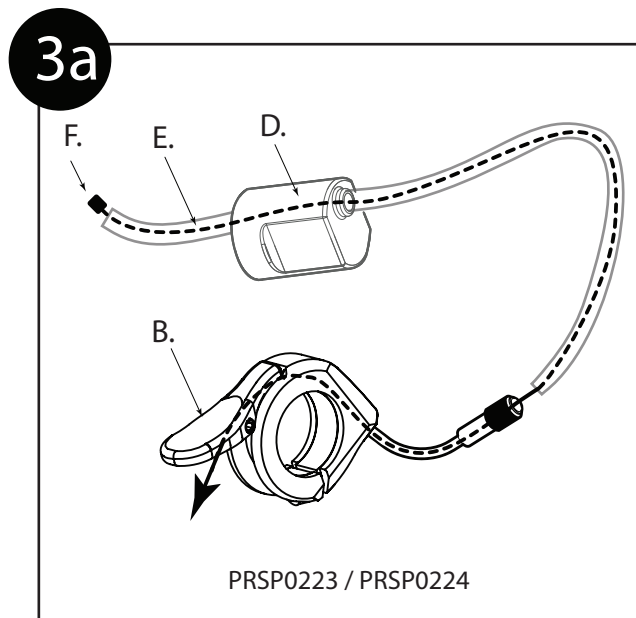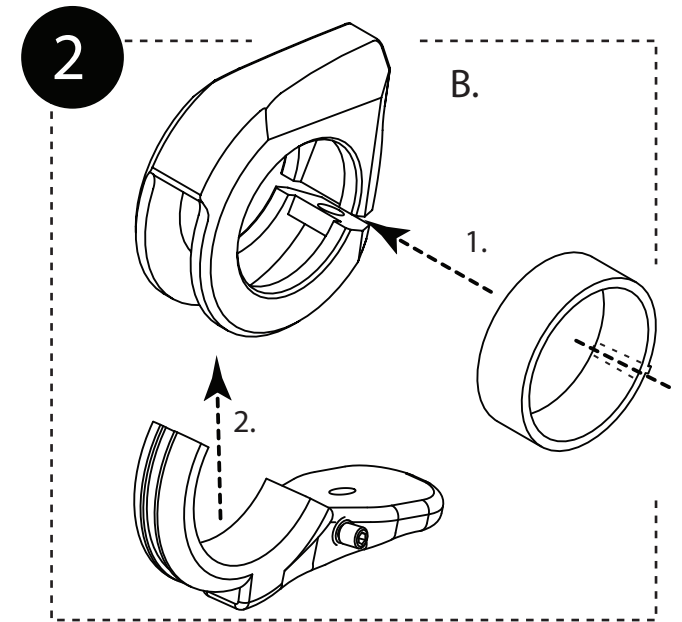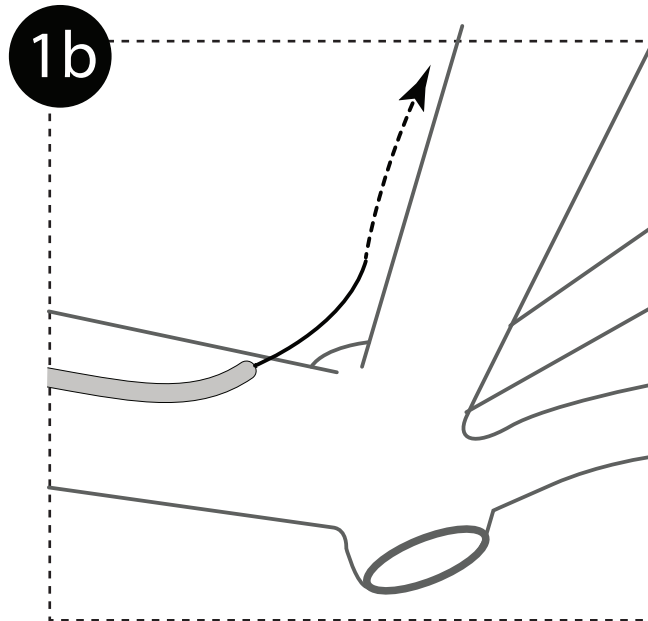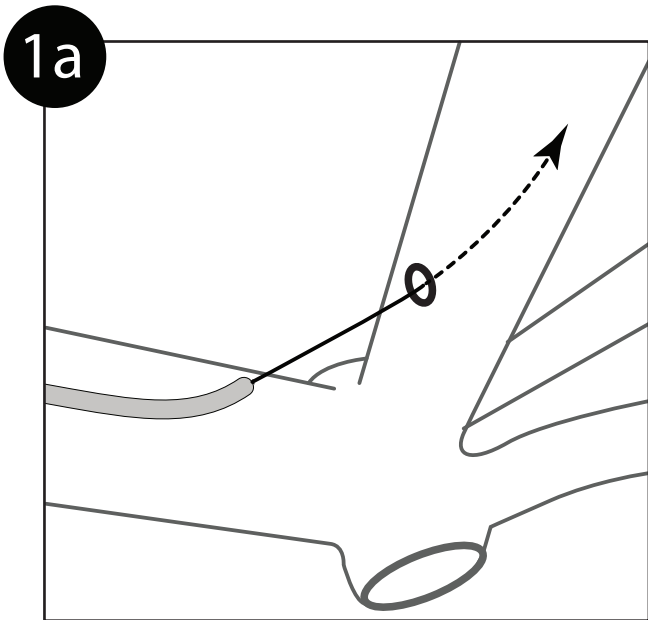

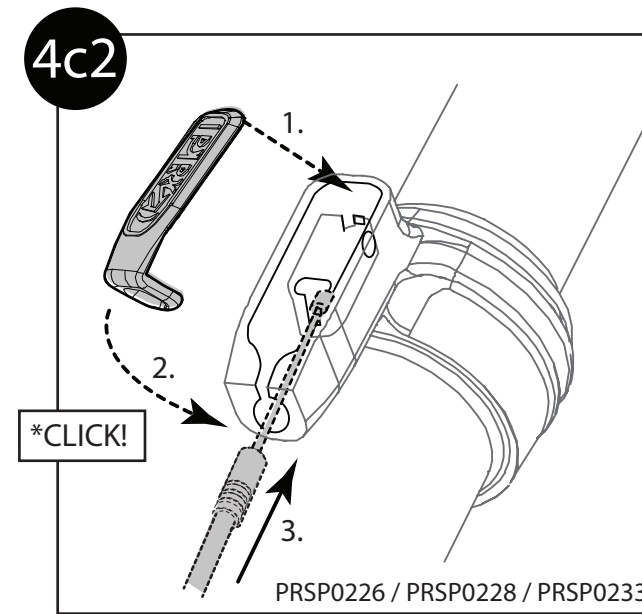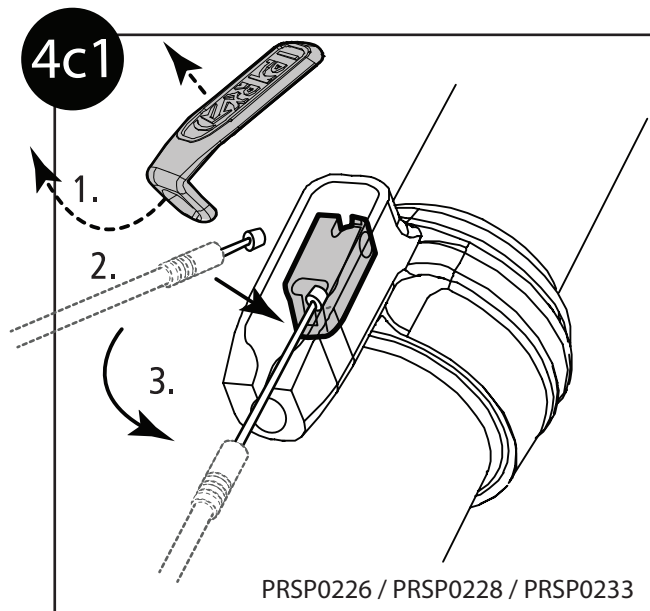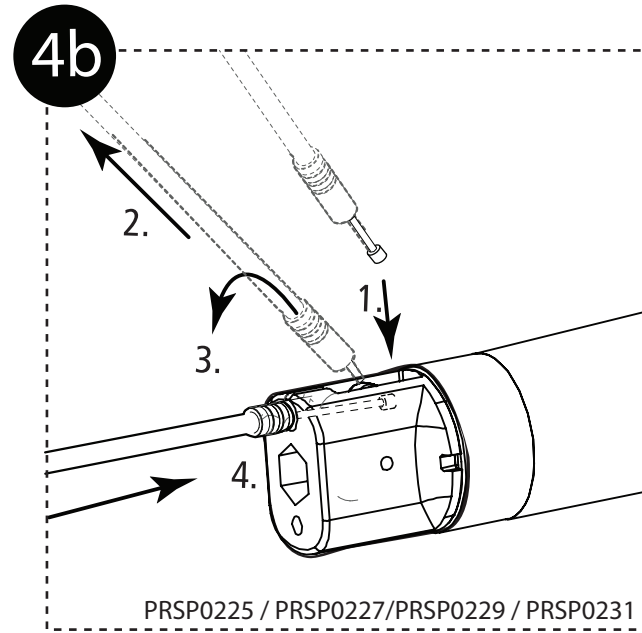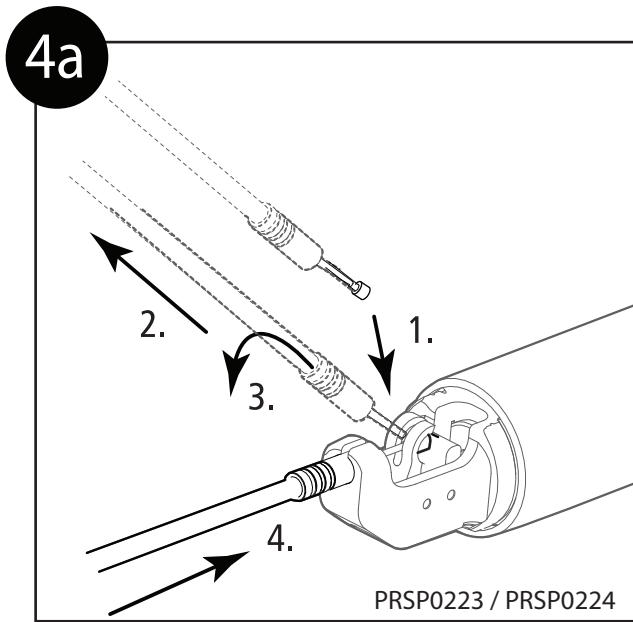

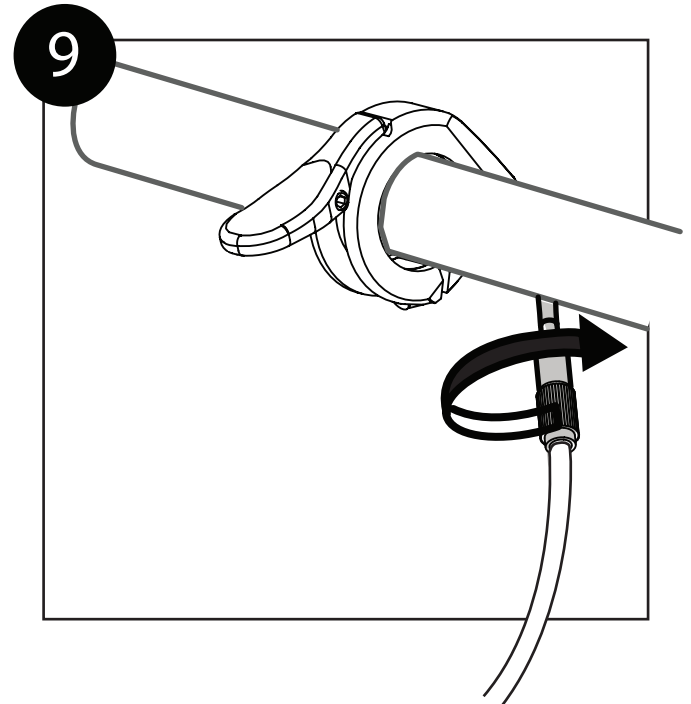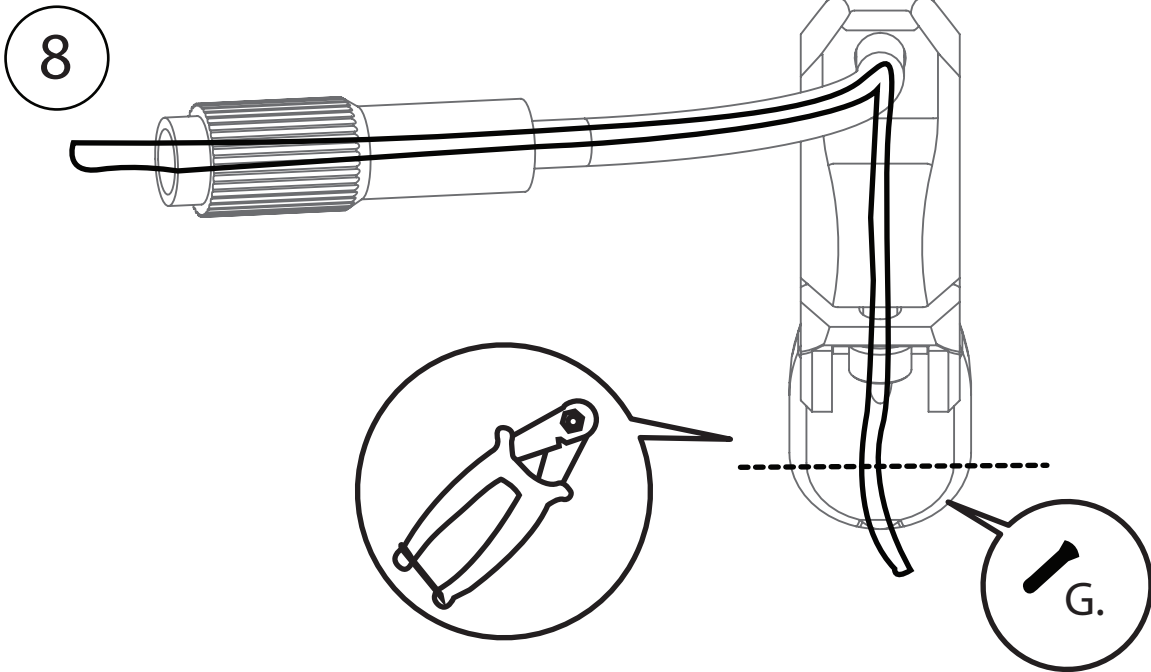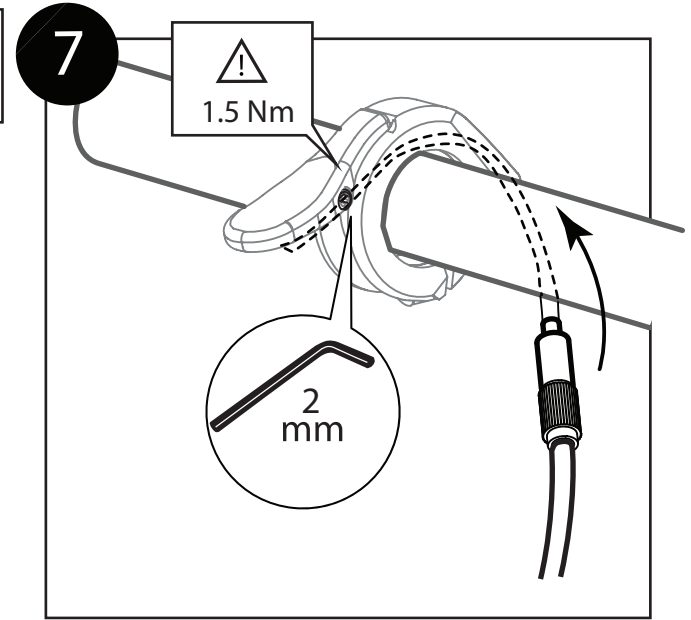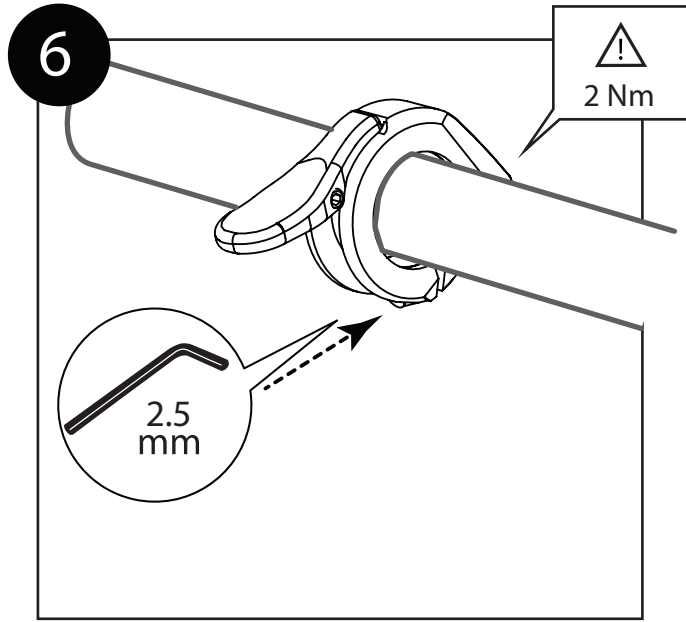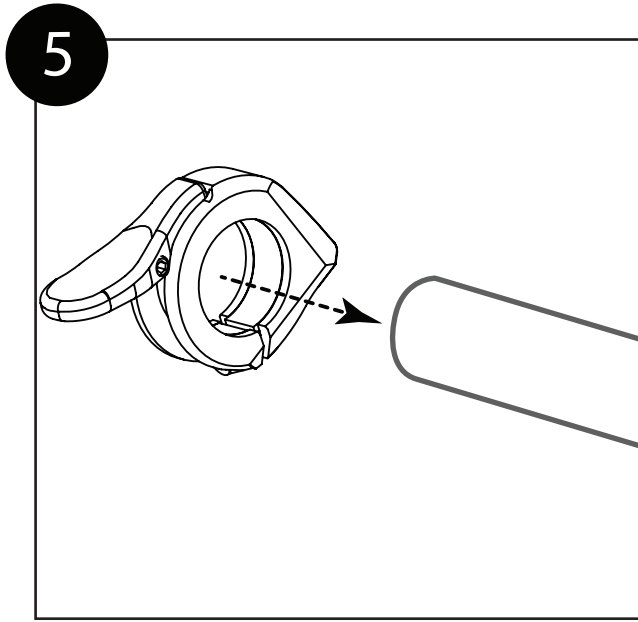

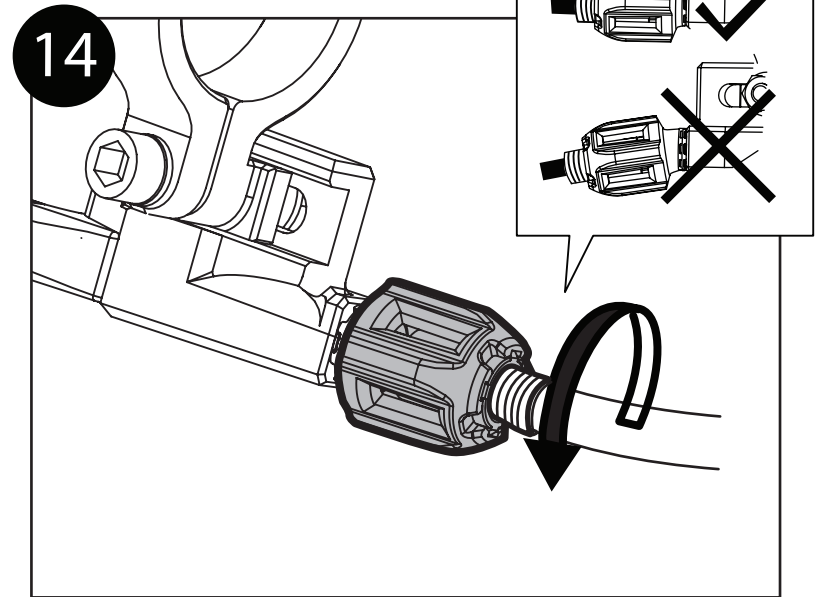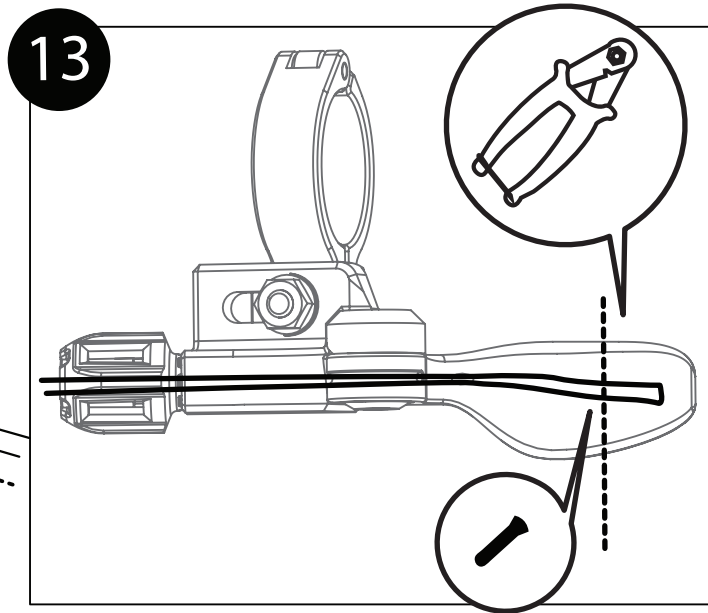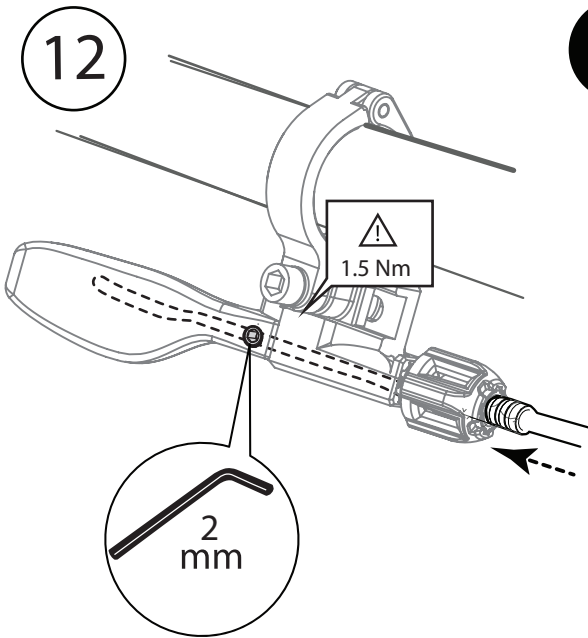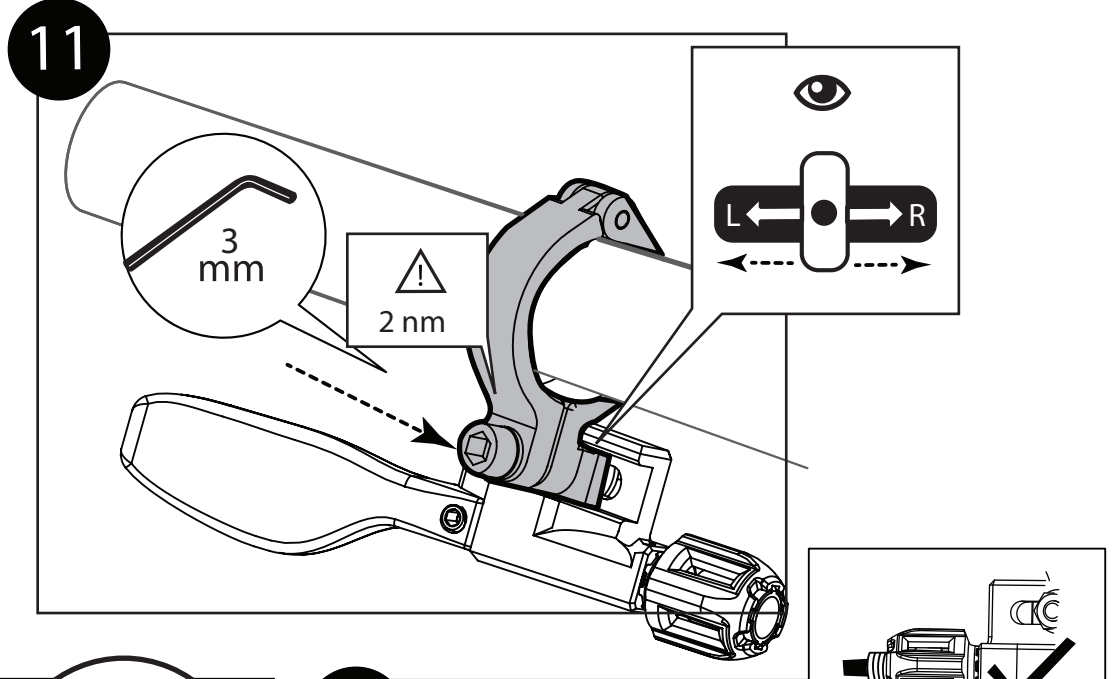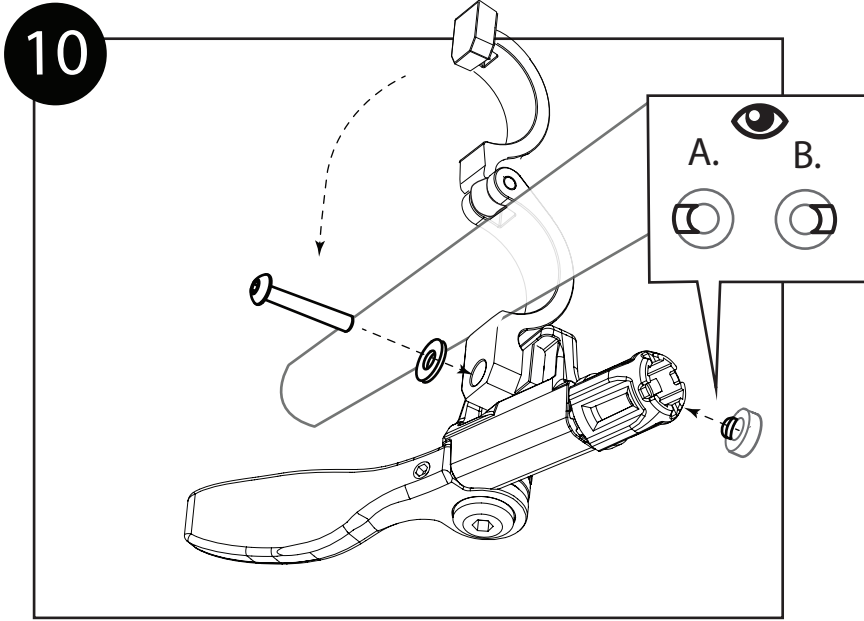



WWW.PRO-BIKEGEAR.COM