

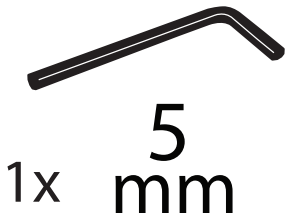


PRO Missile
Clip-on manual
PRSI0073

Tools needed

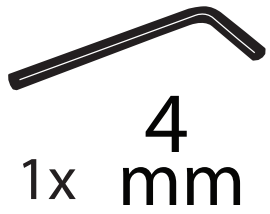


2x Bracket handlebar bottom

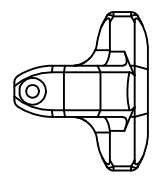


2x Bracket handlebar Top



2x Bracket handlebar Spacer




2x Bracket Armpad

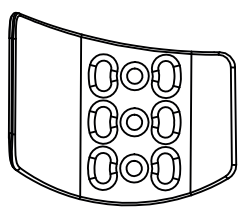


1x Armpad Left



4x Spacer Armpad

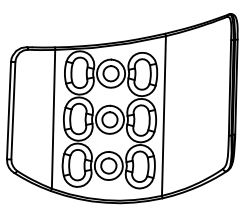


1x Armpad Right




12x Bolts

Missile Clip-on parts

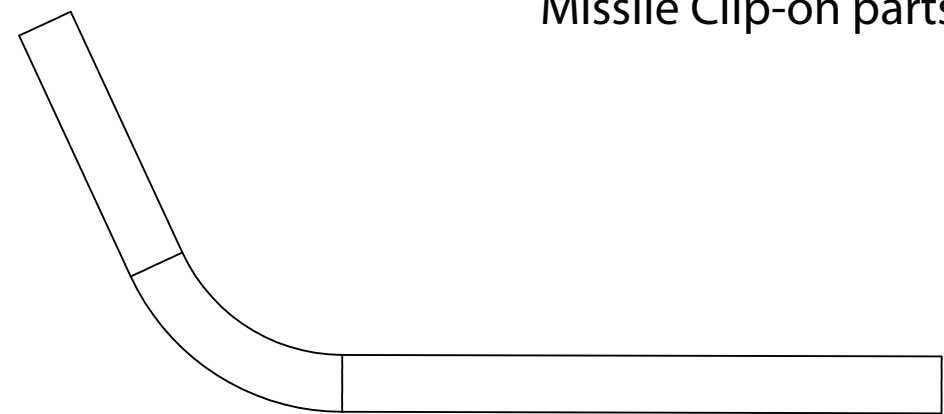


2x Extension SKI 65deg

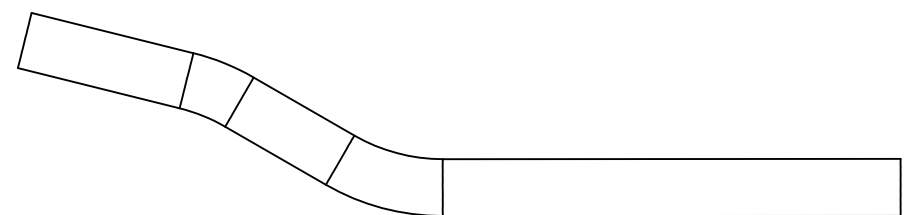

2x Extension S-Bend 30deg




2x Extension SKI 45deg

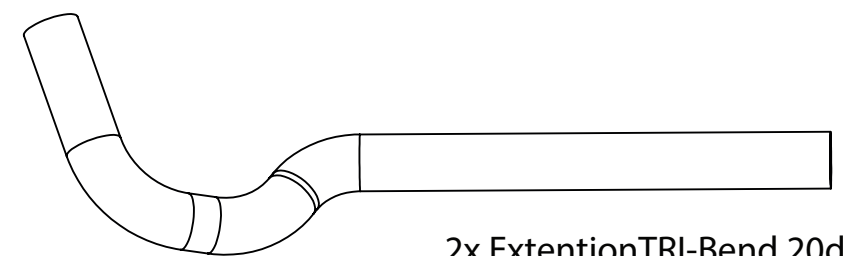


2x Extension TRI-Bend 20deg


Max/min Extension length

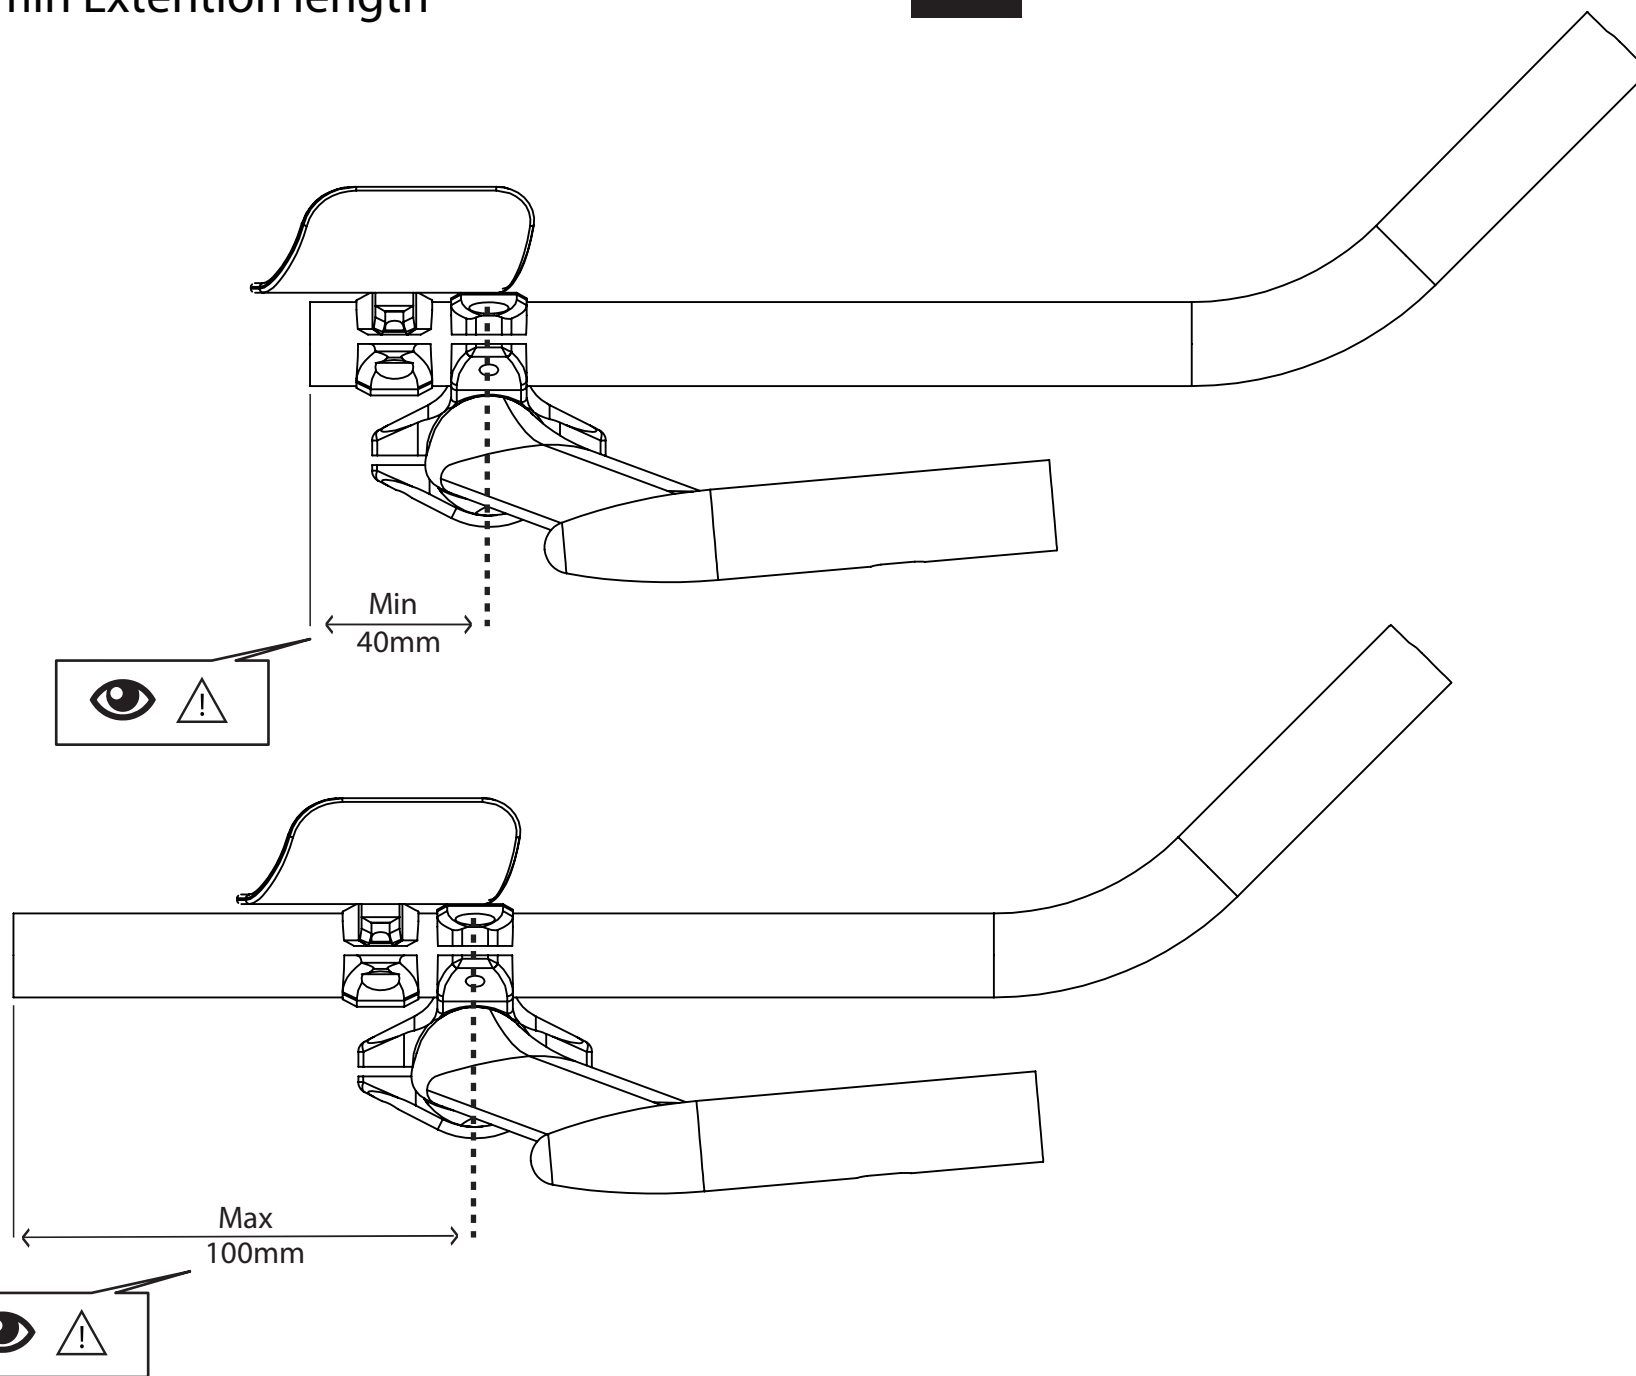





Max extension width

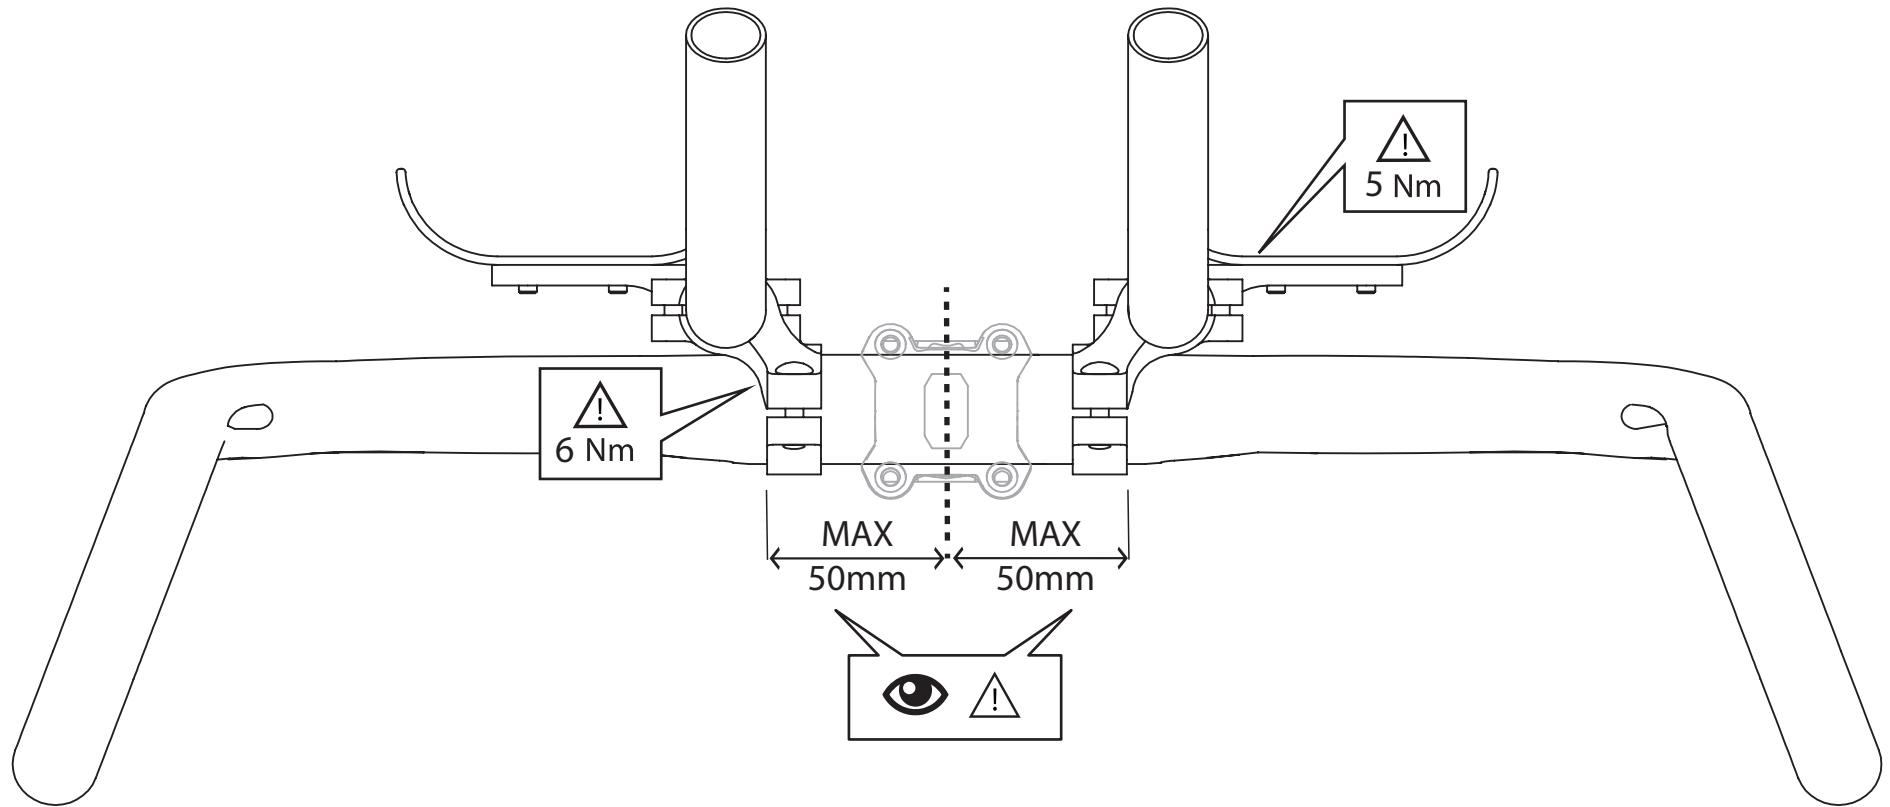

Exploded view installation

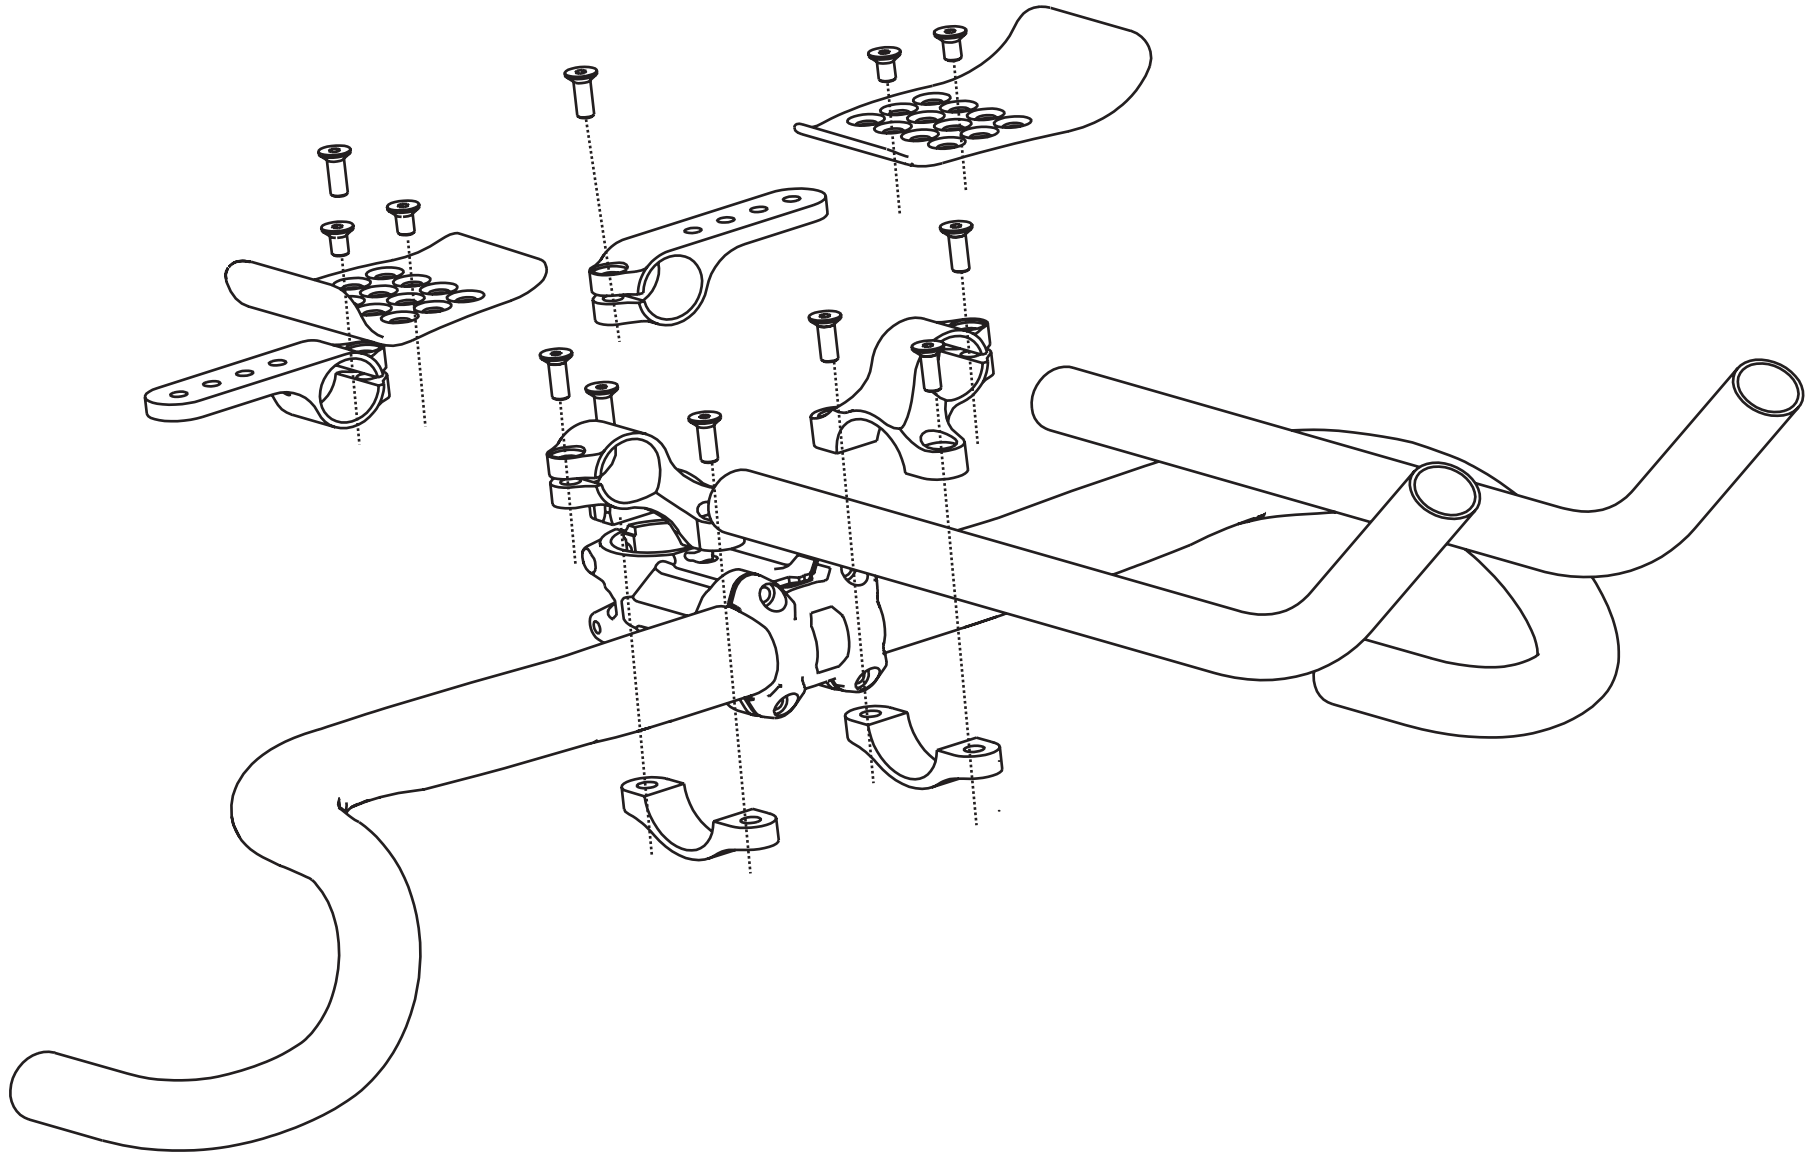


Spacers and bolt length

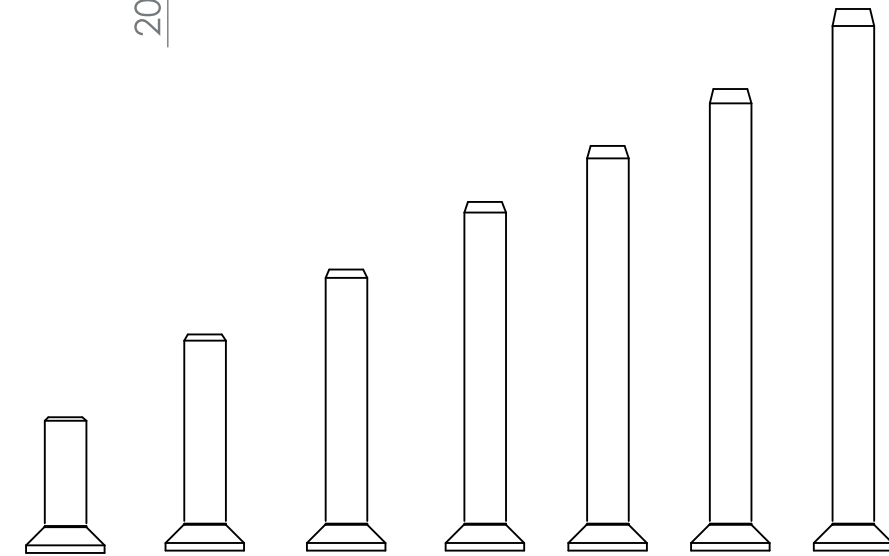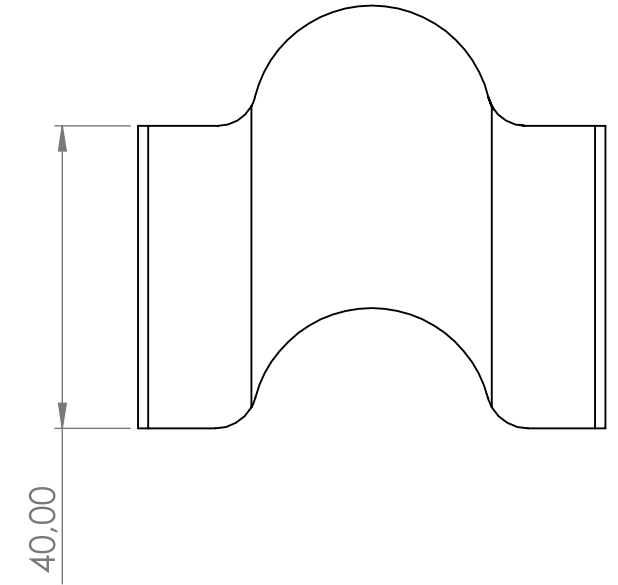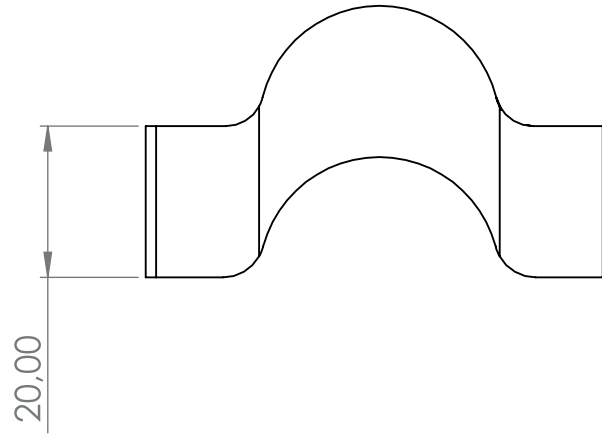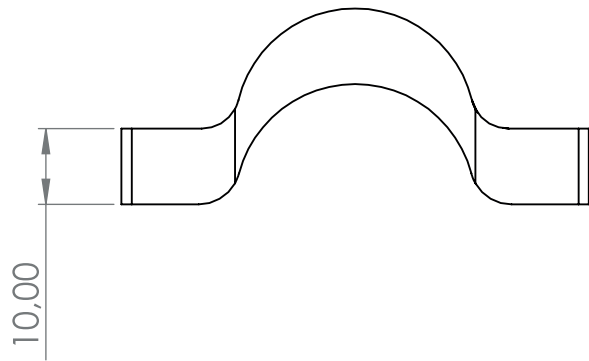

M5x25 M5x35 M5x45 M5x55 M5x65 M5x75 M5x85

Spacer (mm)	10	20	30	40	50	60	70
Bolt (mm)	25	35	35	55	65	75	85

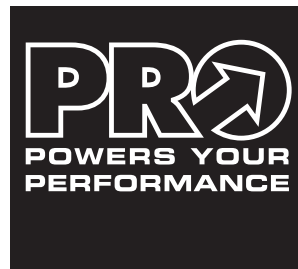

WWW.PRO-BIKEGEAR.COM